

PNF Installation note


Number: PNFIN08241001

Models affected	Digital Main board PN	Function (Keyboard) PN
Magnavox 32MF330B/F7 (DS1A/DS3A)	A01F0MMA-003	A01F0M1V-001-FNIRJN
Sylvania LC320SS1 (DS1A, DS2A)	A01F1MMA-001	A01F0M1V-001-FNIRJN
LC320SL1 (DS1A)	A01F4MMA-003	A01F0M1V-001-FNIRJN
LC320SL1 (DS2A)	A01FHMMA-001	A01F0M1V-001-FNIRJN
Emerson LC320EM1 (DS1A)	A01F4MMA-003	A01F0M1V-001-FNIRJN
LC320EM1 (DS2A)	A01FAMMA-001	A01F0M1V-001-FNIRJN
LC320EM1 (DS5A)	A01FHMMA-001	A01F0M1V-001-FNIRJN

Symptom: Volume goes up or down without any buttons on the remote or keyboard being pressed.
Set shuts off and comes back on.

Cure:

Remove capacitors C3714 and C3718 on the digital main board if they are present. Later stock may not have these capacitors.

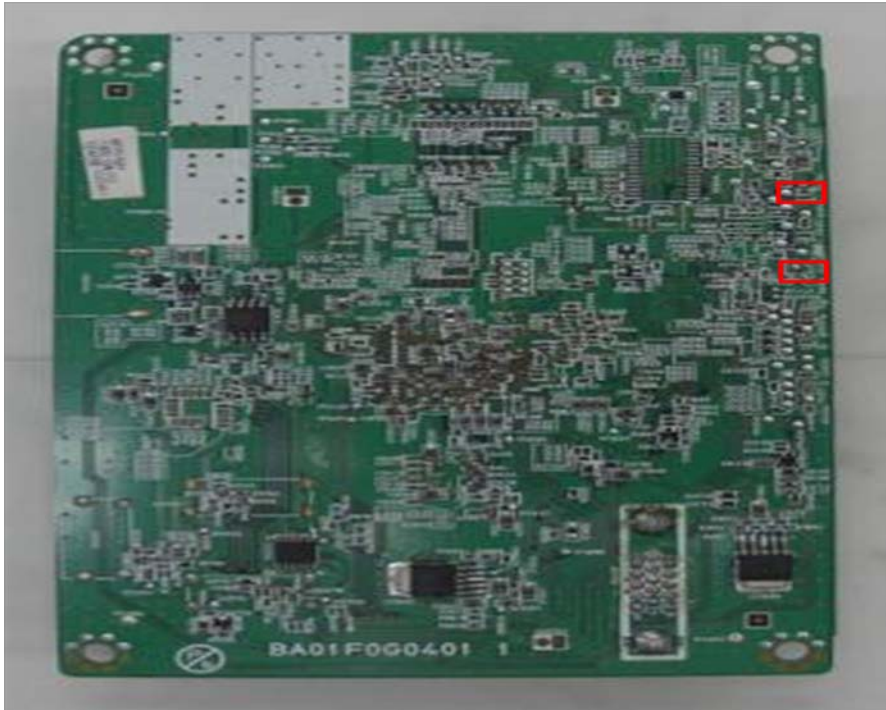

Continued on next page

